


RÜCKENPOLSTER

Back pad / Dorsale / Almohadilla de espalda / Imbottitura dorsale




Art.Nr: 30165-300

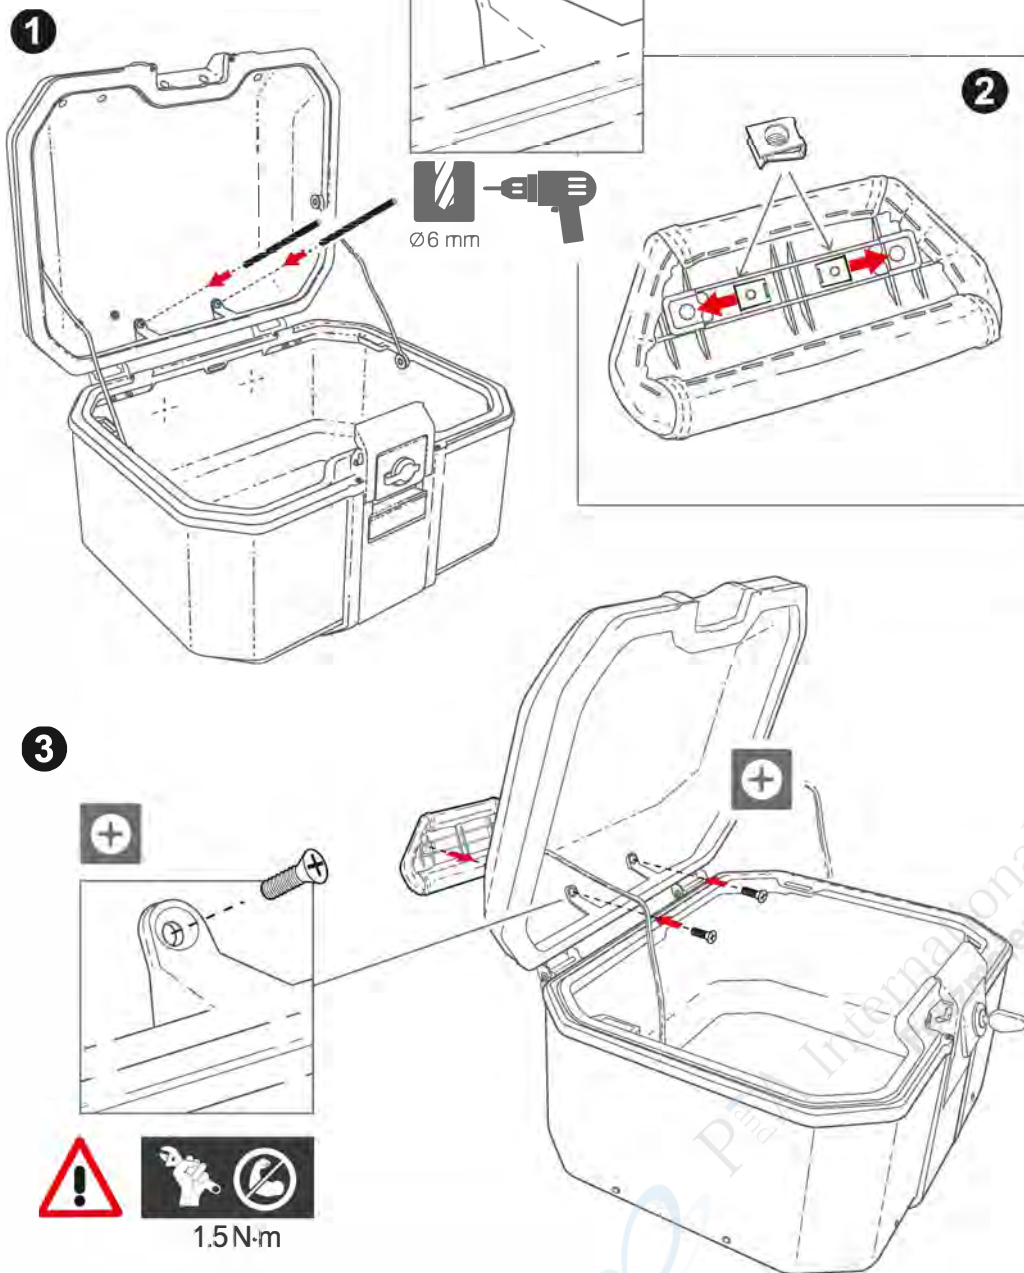

An der vorhandenen Einkerbung bohren.

Drill at the existing notch.

Percer à l'encoche existante.

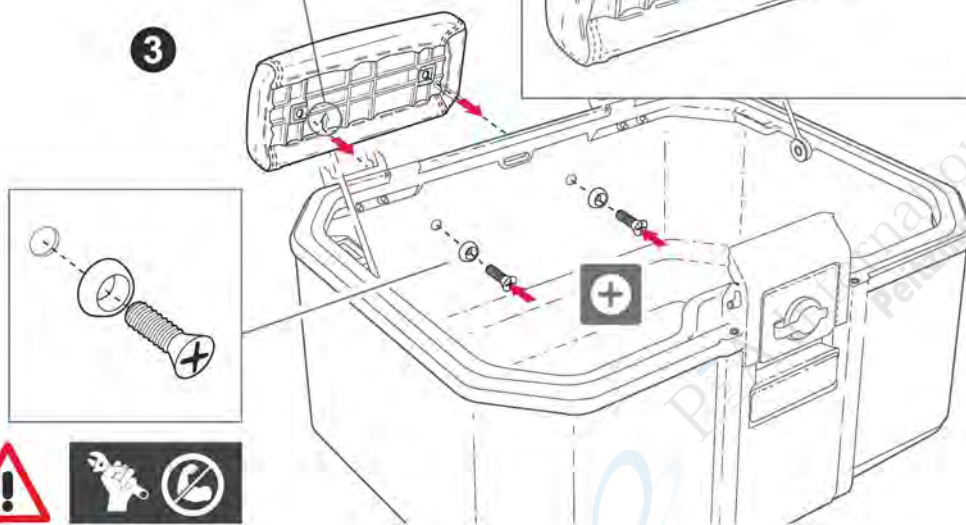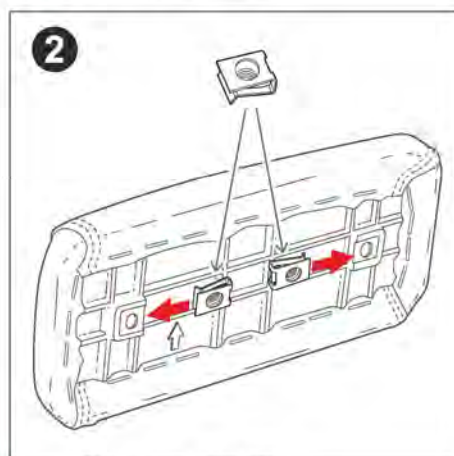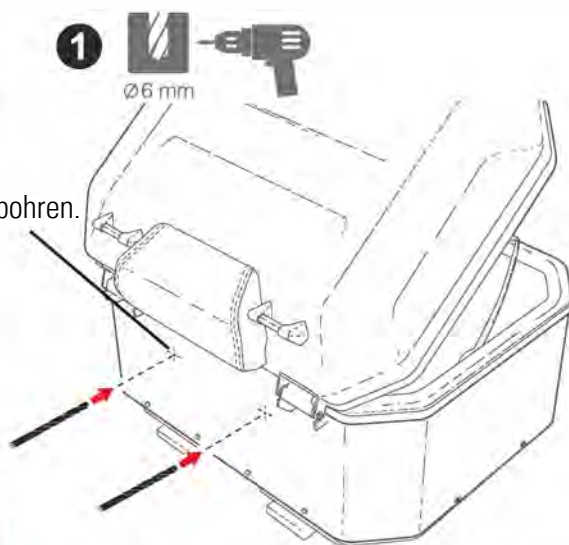

1 N·m